

MIRRORSTONE

LIGHTING SPECIALIST


Easilight Touch Dimming Remote Controller

MS-EZI-FUT087

1. Features


This stylish and fashionable touch dimming remote is a newly developed control option from our innovative Easilight range. Using high-precision IC, this remote is sensitive to touch, but stable. It also makes use of the 2.4GHz frequency control methods, which ensures low power consumption, long distance transmissions, reduced interference and fast speeds.

2. Diagram

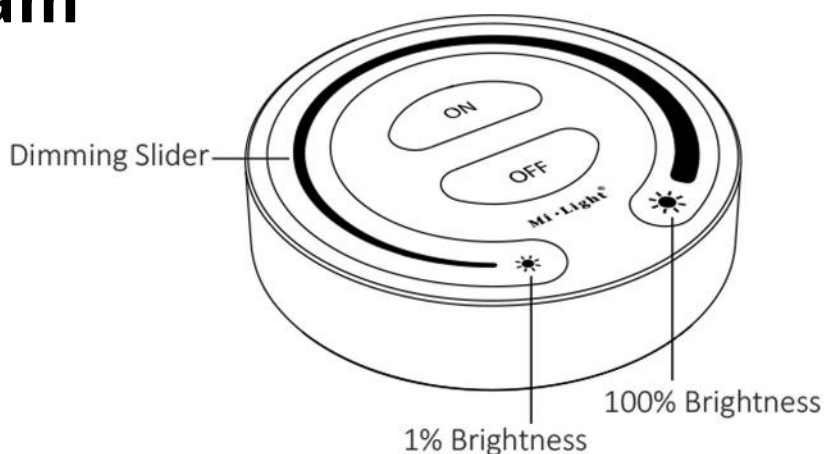

 Short press to turn on the light. This is also the button for Link/Unlink mode.

 
 Short press to turn off the light. Long press for Night Light mode.

 Touch to choose between 1% and 100% brightness.

3. Linking And Unlinking Your Remote


Linking Your Remote And Your Lights

Note: After linking with the remote, the light can be used.




1

Switch off the light, wait 10 seconds, then switch it on again.

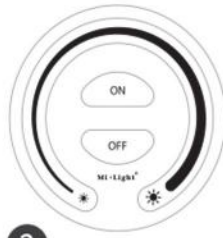

2

Short press the ON button on your remote 3 times within 3 seconds.

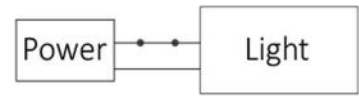

3

Your lights should blink 3 times slowly to indicate the linking was successful.



If the light does not blink slowly, the linking has not been successful. Please try the above steps again.


(Note: Lights that have linked can't link again until they've been unlinked)

Unlinking Your Remote And Your Lights




1

Switch off the light, wait 10 seconds, then switch it on again.

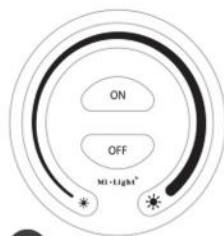

2

Short press the ON button on the remote 5 times within 3 seconds.

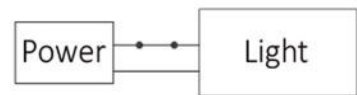

3

Your lights should blink 10 times quickly, which means the unlinking has been successful.




If the light does not blink quickly, the unlinking has not been successful. Please try the above steps again.


(Note: If you haven't linked your lights to anything yet, they won't need to unlink)

4. Installation


1. Mount the base onto the selected wall. Ensure the two screws are on the same level. There is an arrow on the base plate, make sure it is facing up.

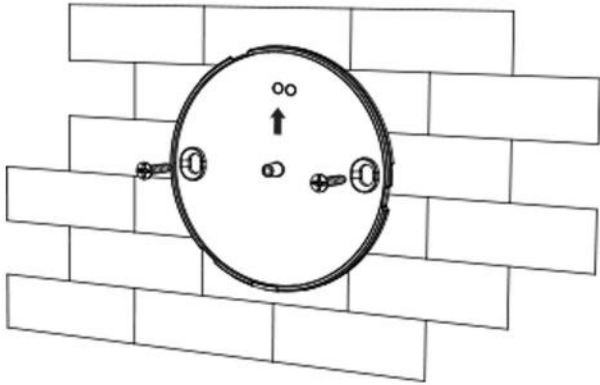


2. Place two AAA batteries inside the remote and place it on to the base.

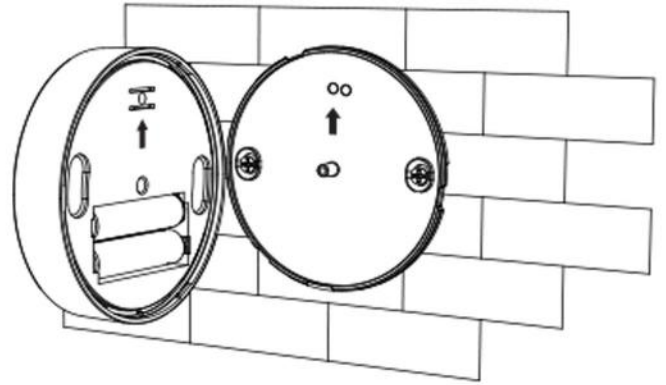

3. To fix the remote in place, press downward and rotate it to the left.

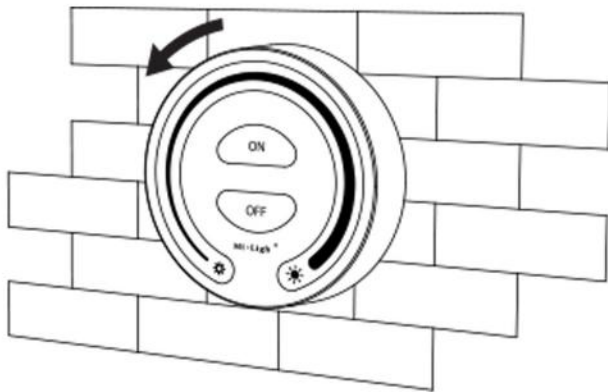

4. To Dismantle your remote or to replace the batteries, rotate the remote to the right and pull downwards.

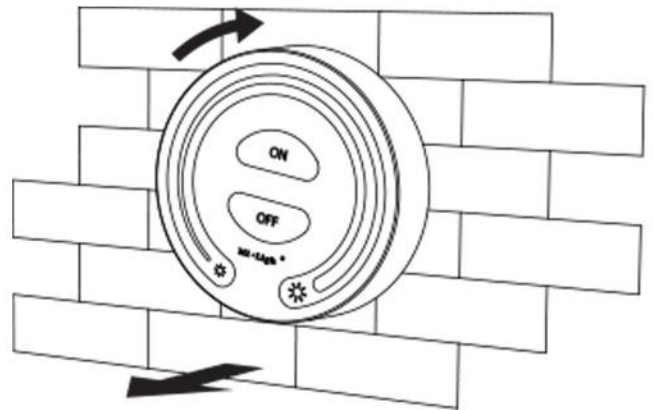

5. Attention

1. This remote is only compatible with selected Easilight Products.
2. When using the remote, if the lamp starts blinking quickly.
3. Only use high quality batteries with this remote, to prevent leaking battery fluid damaging it.
4. Do not use this remote in humid, high temperature, dusty or high voltage environments.
Only use this remote indoors, in dry rooms.
5. Don't use this remote in areas with strong electromagnetic waves or lots of metal, as this will badly affect the controlling distance.

MIRRORSTONE

LIGHTING SPECIALIST

sales@mirrorstone.co.uk
www.mirrorstonelighting.co.uk/
86 Scudamore Road Leicester, LE3 1UQ
+44 (0) 116 321 4121