# MIRSORSTONE LIGHTING SPECIALIST

### Easilight 6W GU10 RGB + CCT LED

Model: MS-EZI-FUT106, MS-EZI-FUT104, MS-EZI-FUT108, FUT088

### 1. Features

Using the widely adopted 2.4GHz wireless technology, with the low power consumption, long signal transmission and strong anti-interference potential that implies, this GU10 spotlight is a popular choice for both hotel lighting and home lighting.

It also boasts an auto-transmitting and auto-synchronising function.



16 million colours to choose from



Colour temperature adjustable



Dimmable brightness and saturation



2.4G RF wireless transmission technology



Signal transmitting and mode synchronisation



Remote control distance of 30m



Smartphone app control (with 2.4GHz gateway)



Support third party voice control (with 2.4GHz gateway)



DMX512 controllable (with compatible LED transmitter)

### 2. Dynamic Mode Table

#### To Select Dynamic Mode Table 1

Turn off the light for 10 seconds, then turn it back on. Within 3 seconds of turning it back on, press the S+ button 5 times. The blue indicator light will blink 3 times slowly to indicate success. This table is the default.

#### To Select Dynamic Mode Table 2

Ensure the light is powered off for 10 seconds, then turn it back on. Within 3 seconds, press the S- button 5 times. A yellow light will blink 3 times slowly to indicate success.

#### Dynamic Mode Table 1 (Default)

 
Number	Dynamic Mode	Brightness/Saturation/Speed
1	Mardi Gras	Adjustable
2	Automatic Colour Change	
3	Sam	
4	Gemstone	
5	Twilight	
6	America	
7	Fat Tuesday	
8	Party	
9	Slow Colour Splash	

#### Dynamic Mode Table 2

 
Number	Dynamic Mode	Brightness/Saturation/Speed
1	Colours change gradually	Adjustable
2	White light change gradually	
3	RGB change gradually	
4	Seven colours jump to change	
5	Jump to change randomly	
6	Red light gradual change + Flash 3 times	
7	Green light gradual change + Flash 3	
8	Blue light gradual change + Flash 3 times	
9	White Light gradually change + Flash 3	

## 3. Linking/Unlinking Instructions

### Linking Instructions







Switch off the light, wait 10 seconds, then switch it on again. When the light is on, short press the ON button 3 times within 3 seconds. The light should now blink 3 times slowly to indicate a successful linking.



If the light does not blink slowly, the linking has not been successful. Please switch off the light and follow the above steps again.

#### **Unlinking Instructions**



Switch off the light, wait 10 seconds, then switch it on again.

When the light is on, short press the ON button 5 times within 3 seconds.

The light should now blink 10 times quickly to indicate a successful unlinking.




If the light doesn't blink quickly, then the unlinking has not been successful. Please try again.

**Note:** If a light hasn't been linked yet, you won't need to unlink it.

### 4. Linking Your DMX512 LED Transmitter (sold separately)



Choose the zone for the light by pressing the "+" or "-" key. For example, CH12 means zone twelve.

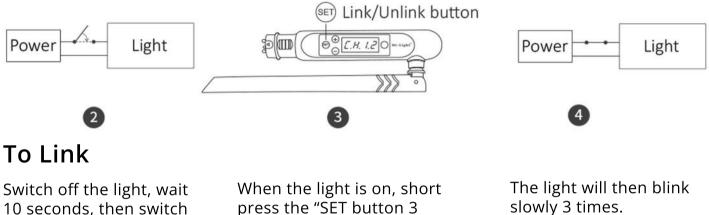

10 seconds, then switch it on again.

press the "SET button 3 times within 3 seconds.


### To Unlink

Switch off the light, wait 10 seconds, then switch it on again.

When the light is on, short press the "SET button 5 times within 3 seconds.

The light will then blink quickly 10 times.

### 5. DMX512 LED Transmitter Connection

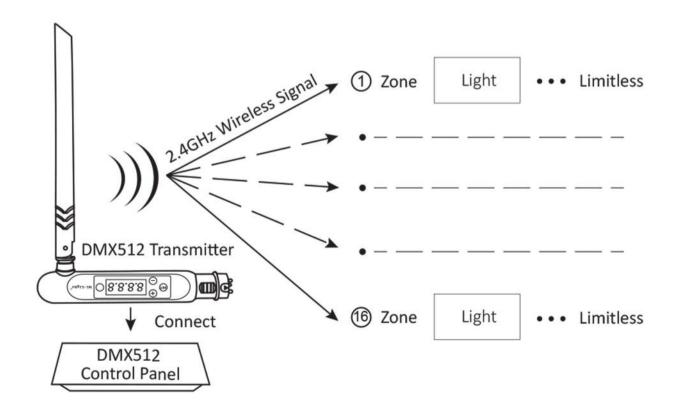


## 6. Signal Transmitting

One light can transmit the signals from your remote control to another light, as long as the second light is within 30m. This means you have a theoretically limitless range for your lights.

### 7. Mode Synchronisation

Different lights can work synchronously even when they are started at different times, as long as they are lit by the same remote, under the same dynamic mode and within 30m of each other.

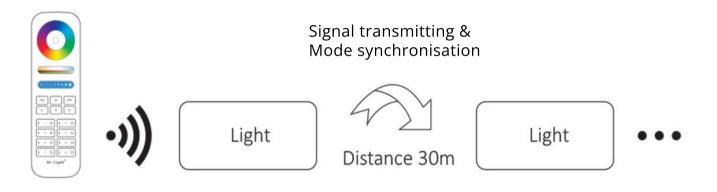

### 8. Do Not Disturb Mode

#### To Turn On Do Not Disturb

Press the OFF button three times within 3 seconds, then press the ON button three times. Once successful, the LED light will flash four times.

Attention: When do not disturb mode is activated.

- 1. When you have used the app or remote to turn the light off, the light will remain off until you turn on the power twice.
- <sup>2.</sup> When the light is on, it will remain so until you turn the power off and on

#### To Turn Off "Do Not Disturb"

Press the ON button three times within 3 seconds, then press the OFF button three times. The LEDs will flash four times to indicate Do Not Disturb mode is off.

Attention: Once you've deactivated Do Not Disturb mode, the light will always be considered in the on status if you turn the power on and off.

## 9. QR Codes

If you want to learn how to pair your controller with a smartphone app, or with a third party voice control system, you can scan these QR codes to watch an instructional video.



Smartphone app control



Third party voice control

### **10. Attention**

- 1. Please check whether the voltage of the power supply is in accordance with the light. Please also check the connection of the cathode and anode, or else you risk damage to the light.
- 2.Never connect wires with the power on.
- **3**.Only turn on the power when the connection is correct and there is no risk of a short circuit.
- 4. Only professionals should dismantle this fitting directly.
- 5.Do not use this light in locations with a lot of metal or strong electromagnetic waves, as this will affect the remote distance.

### Compatible With The Following Remotes (Sold Separately)



# MIRAORSTONE LIGHTING SPECIALIST

sales@mirrorstone.co.uk www.mirrorstonelighting.co.uk/ 86 Scudamore Road Leicester, LE3 1UQ +44 (0) 116 321 4121